

Step1 Device Installation Instructions

ITEMS NEEDED

- A. Step1 Device
- B. Step1 Device Sticker
- C. 70% + Isopropyl Alcohol Prep Pad
- D. Measuring Tape (Not Included)
- E. Pencil (Not Included)



INSTRUCTIONAL VIDEO

QR CODE



1. MEASURE

Measure 48 inches from the bottom of the door to above the door handle of the door.

Use the pencil to mark this measurement on the door. The top of the Step1 Device should be installed to the door just below the 48 inch line on the door.




2. CLEAN

Using the isopropyl alcohol prep pad, clean approximately a 2 inch by 4 inch section of the door, close to the door jamb, where the Step 1 Device will be mounted on the door.

If the door has grease or oils on it you may need to use an acetone or heavy degreaser to clean the area with. It is important to clean the area the device will be mounted against.

If surface is tacky to the touch, may have to remove paint and re-clean with alcohol prep pad.

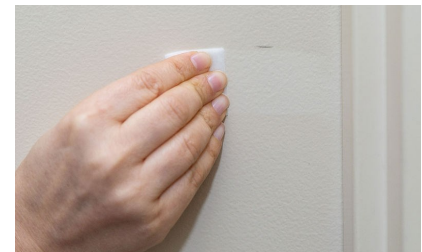


3. TEST BEFORE MOUNTING

Test the Step1 Device by sliding it back and forth from the open to the closed position. The device should slide open easily. Place the device in the open position, exposing the green indicator.



4. Install

Remove the backing to the tape on the backside of the device. Place it flush against the edge of the door with the top of the device just under the 48 inch line you previously marked on the door. Press the device against the door to create an adhesive bond.

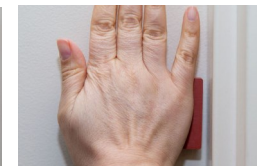

5. TEST AFTER MOUNTING

Slowly close the door to ensure the device makes contact with the door jamb. This should cause the door to remain slightly open.

Slowly slide the red ring over the green indicator and ensure the door will now close and secure properly.

Place the sticker next to the device on the door.



6. FINAL STEP

To create a full bond, allow 24-72 of bonding time to the door to ensure the device will be fully secure.